


# Technical Information

BLS Spray Application

03.09.2021

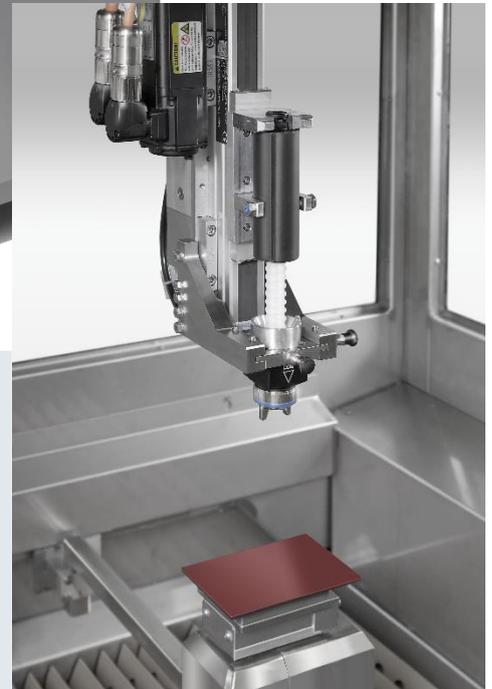

Geschäftsanschrift:  
Füll Lab Automation GmbH  
Richard-Klinger-Straße 31  
D-65510 Idstein

Betriebsstätte:  
Füll Lab Automation GmbH  
Riedstraße 25  
D-73760 Ostfildern

Geschäftsführer / Director:  
Registergericht / Register no.:  
Steuernummer / Sales tax identification:  
USt.IDNr:

Cornelius Bruhin  
HRB 723656, Freiburg i.Br.  
06426/40581  
DE340943638

info@fuell-labautomation.com | www.fuell-labautomation.com

## The BLS spray-application

The innovative technology used in the BLS spray application allows highly reproducible coating with low amounts of paint in industrial quality.

The change between different paints and coatings types (water and solvent based) can be carried out without cleaning.


The unique design, based on a conventional pneumatic spray head, ensures highly reproducible spraying results.

The BLS spray application uses an award-winning technology (European Coating Award 2005) and is available in two different variants: a stand-alone machine for your QC or coating-lab and a robotic module for use in fully automated coating systems.

### Benefits

- Easy to use, also for untrained operators
- Prepare samples by a simple "press-button" operation
- Robust design
- Minimum cleaning and service effort
- Ready-to-use system
- Low material consumption
- Reduction of cleaning solvent quantity

## The BLS syringe technology

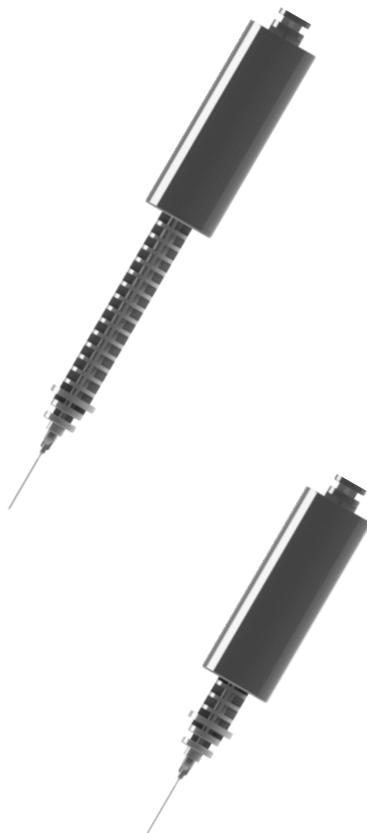

### Benefits

- The BLS syringe is used for introducing coating material in the spray application.
- This syringe is comparable to a cartouche system, which can hold and store material and supports direct spraying without trans-filling the coating material.
- The dosing tip is introduced in the spray head such that there is no direct contact between the liquid coating material and the spray nozzle. Therefore, no cleaning is required between the individual spraying processes.



## Range of applications

The BLS spray application is in continuous operation at a large number of customers.

It is meanwhile mainly used in quality control. Here our customers benefit from the high reproducibility.

Comparison of spraying results across different machines and even different production sites is easily possible with the BLS spray application.

For many coating systems and application methods the spraying parameters can be transferred to the BLS spray application independently from the application method of the end-user.

## Benefits

### Quality control


- Highest reproducibility
- Colour, gloss and film thickness can be compared **across different sites**
- Less customer complaints by using tighter tolerances in your approval process
- Approval independent from end-customer application system by transferring spray parameters

### Research & Development

- Application with very small amounts of paint (> 5ml)
- Independence for your application engineering group
- Acceleration of your R&D projects

## Technical Data

see page 6 „Design Size / Variants / Options“

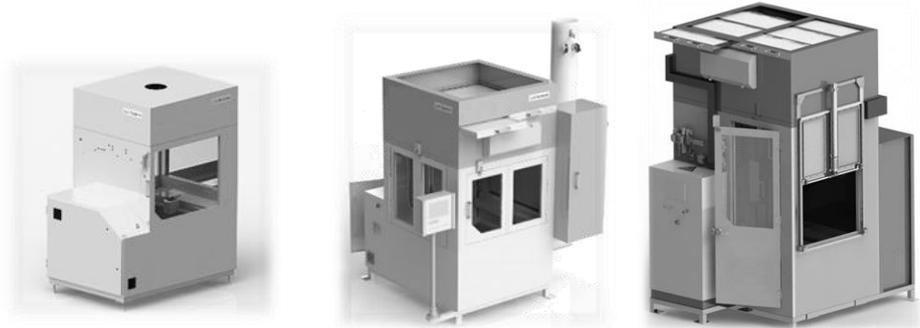

Design size		10	30	50
Width x depth x height		1810 x1200 x 2390 [mm]	1480 x 2380 x 2590 [mm]	1780 x 2360 x 3190 [mm]
Weight		approx. 800kg	approx. 1100kg	approx. 1500 kg
Exhaust (horizontal application)		min. 1000 m <sup>3</sup> /h rec.* 2000 m <sup>3</sup> /h	min. 2000 m <sup>3</sup> /h rec.* 3000 m <sup>3</sup> /h	min. 3500 m <sup>3</sup> /h rec.* 4500 m <sup>3</sup> /h
Exhaust connection		Ø 180 mm	Ø 200 mm	300x500 mm
Supply air		room air 4-5m/s	room air 4-5m/s	room air 4-5m/s
Power supply		AC 400V 50/60Hz	AC 400V 50/60Hz	AC 400V 50/60Hz
Compressed air supply		6 - 10 bar	6 - 10 bar	6 - 10 bar
Coatings per day		up to 100	up to 400	up to 400
Travel distance	X Substrate axis	max. 1000mm	max. 1300mm	max. 1600
	Y 2nd axis	max. 480mm	max. 480mm	max. 600mm
	Z Syringe-axis	max. 200mm	max. 200mm	max. 200mm
Recommended substrate size		See page “Design Size / Variants / Options”		

\*rec. = recommended

## Design Size / Variants / Options

Design Size	Type	Electrics	Application direction	Options							Recommended max. substrate size [mm]
				S = Standard filter	T = Pocket filter horizontal	E = Edrizzi Filter	V = Prefilter automatic*	Z = Supply air hood	K = Cross coating		
10	S = Stand Alone R = Robotic	EU = Europe UL = USA	H = horizontal	X	X			X	X	300 x 200	
			V = vertical	X			X	X	200 x 150		
30	S = Stand Alone R = Robotik	EU = Europe UL = USA	H = horizontal	X	X			X	X	300 x 200	
			V = vertical	X		X	X	X	X	300 x 200	
50	R = Robotic	EU = Europe UL = USA	H = horizontal Coming soon!							500 x 500	
			V = vertical	X				X	X	500 x 500	